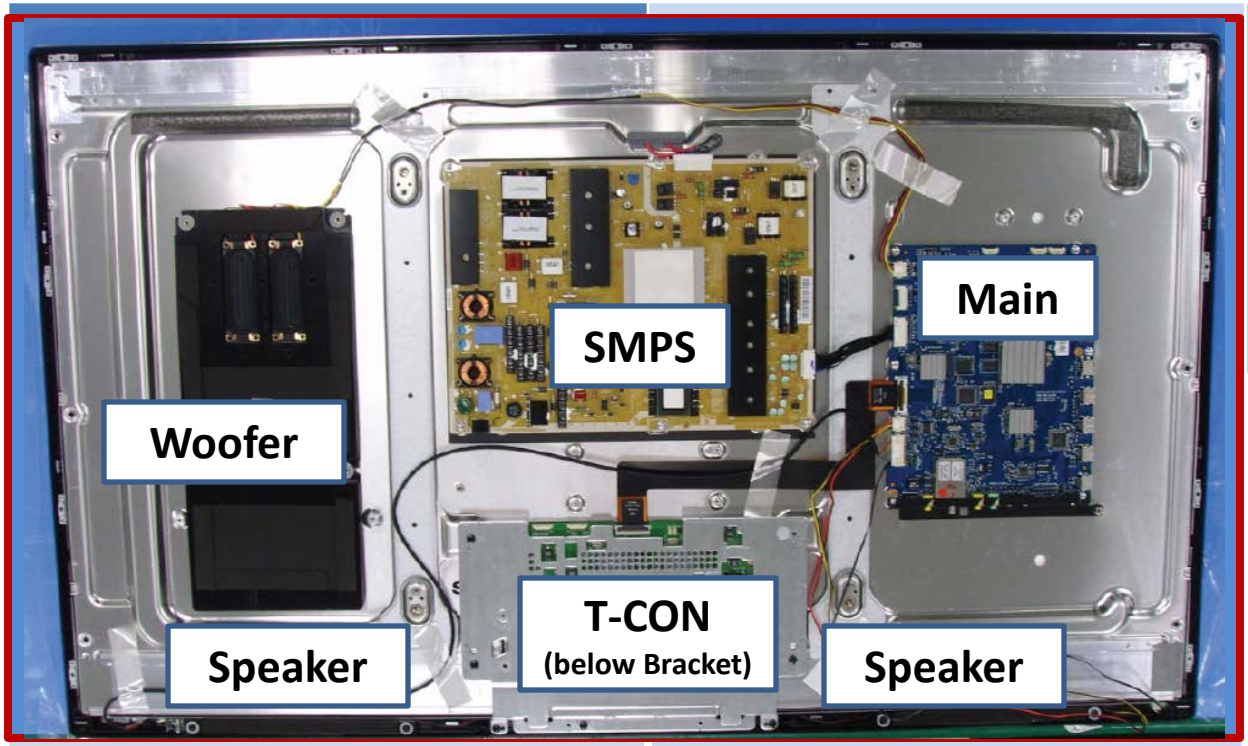

HELP : 1-888-751-4086 (Tech Support)
1-866-894-0637 (FE)

GSPN
http://gspn3.samsungcsportal.com

PLUS ONE
http://my.plus1solutions.net/clientPortals/samsung

HOT TIPS

Power On Problems: (see **page 2**)
Video Problems: (see **page 3.4)**
Other:
HDMI Bleed-over

FIRMWARE

Please check Samsung.com for latest update!
2/21/2011
(T-VALAUSC, 1035.0)
Reason: Support Netflix 2.1 and MLB.tv apps. Support new TV camera (Model: CY-STC1100). Add "3D Optimize" option on Menu for better 3D image.(Only LCD/LED TV)
Previous: 1032.0
Prevents :
-USB Power Overload' message pops up even USB port is not connected
-Plug & Play is displayed upon power up.

SERVICE BULLETINS

No Bulletins listed as of 6/29/11

tfŜl·ăŜ ŏKŜŏ] D{tb ŦƧℕ LJl·ℕűă dzLJŘl·űŜH

Version	Parts No	Short Description
ALL	BN44-00375A	Power PCB
ALL	BN81-04356A	T-CON PCB
ALL	BN94-02757A	Main PCB
ALL	BN96-13847B	Function & IR PCB
ALL	BN07-00863A	Panel
ALL	BN96-13119A	Front Cover
ALL	BN96-13126A	Rear Cover
ALL	BN96-13131A	Stand Guide
ALL	BN96-13133A	Stand Base
ALL	BN59-01055A	Remote
ALL	BN96-12723Q	LVDS Cable
ALL	BN96-12845D	Power Cord
ALL	BN96-12943B	Speaker Front
ALL	BN96-13406B	Speaker Rear

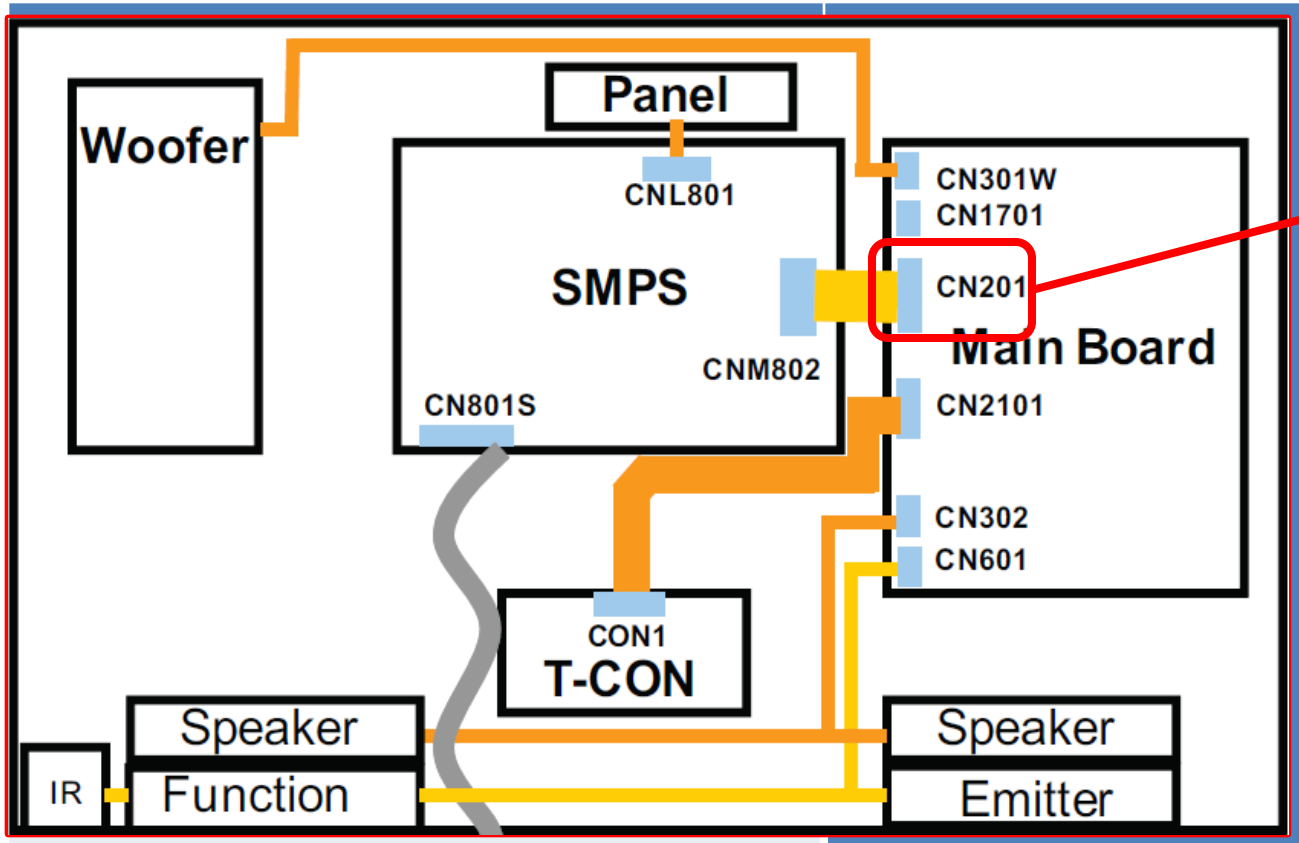

CN 201			
1	P_ON/OFF	16	5.3V
2	HSYNC	17	GND
3	STBY	18	GND
4	G_STBY	19	GND
5	GND	20	GND
6	GND	21	12V
7	12.8V	22	12V
8	12.8V	23	BL ON/OFF
9	GND	24	PWM
10	GND	25	PWM
11	GND	26	GND
12	GND	27	5V DET
13	5.3	28	INV ERROR
14	5.3	29	N.C.
15	5.3	30	N.C.

Power On Sequence:

1. **Standby Voltages:** CN201-3 (5V)
2. **Power On** probable error on CN201-1 P_ON/OFF)
3. **Low Voltage Supplies On** CN201- 7, 8, 13, 14, 15, 16, 21, 22,
4. **Back Light Supply On** CN201 -23
5. **Back Light Confirmation** CN201-27

To Force Backlight On without Main Board :

1. Remove Power Cord
2. Disconnect CN201
3. Plug In Power Cord
4. Backlight should be on immediately.

TROUBLESHOOTING VIDEO PROBLEMS

2011 LED 8000 Series

1. Verify Video Operation

a. **Customer Picture Test** (models available)
b. **"Display"** (If display is OK source is suspected)
C. Substitute with known good Source
(**external DVD or Signal Generator**)

2. Using Test Patterns in Service Mode

- ENTER SERVICE MODE –

1. Select an active source signal. (HDMI preferred)
Test Pattern may rely on signal source to appear.

Customer Remote	Service Remote
2. Power off	2. Power On
3. Mute, 182, Power	3. Info, Factory

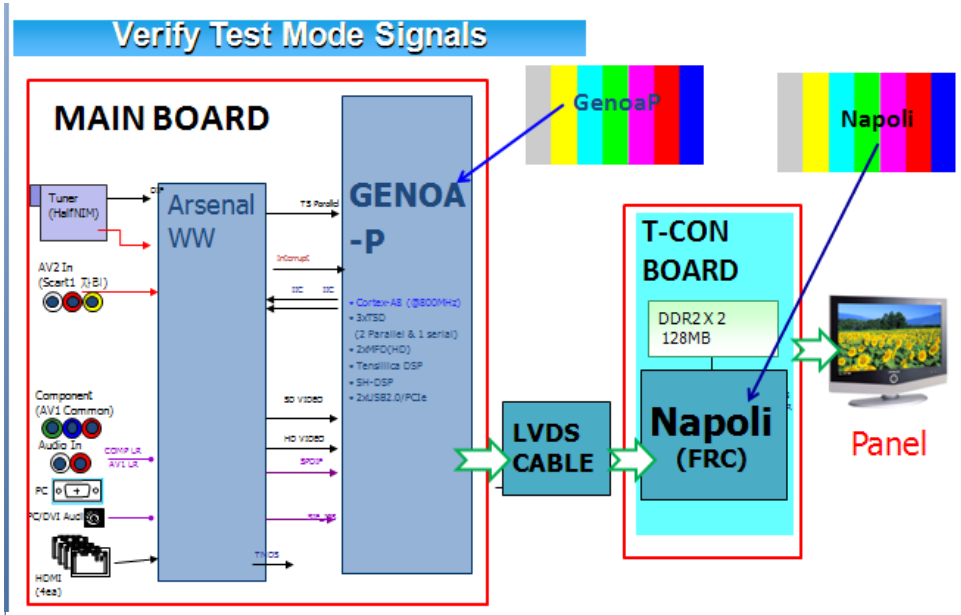

1. **Select an active source signal. (HDMI preferred)**
Test Pattern may rely on signal source to appear.
2. **Access Service Mode**
3. **Access SVC**
4. **Access Test Patterns**
5. **Access Genoa-P**
6. **Check Test Patterns**
7. **If OK suspect input Source**
8. **Access Napoli**
9. **Check Test Patterns**
10. **If OK and Genoa-P was not good**
Suspect Main Board or LVDS Cable

2010 Models

LCD Signal Path for Troubleshooting

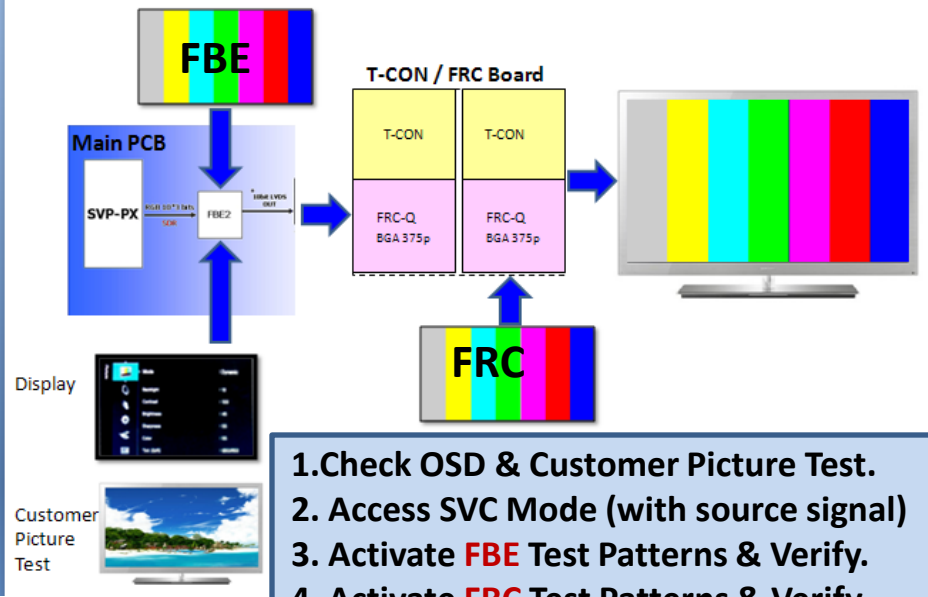

1.Check OSD & Customer Picture Test.
2. Access SVC Mode (with source signal)
3. Activate FBE Test Patterns & Verify.
4. Activate FRC Test Patterns & Verify.

ON SCREEN FAILURE EXAMPLES:

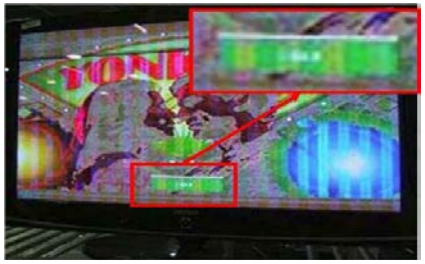

If Picture & Display errors Defective Main Board, LVDS, or T-CON

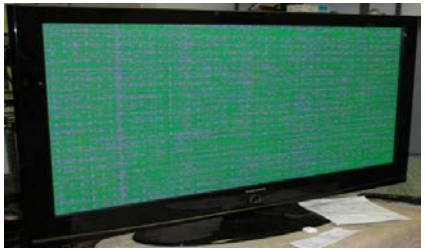

Green lines or a green screen defective main board , LVDS , or T-CON.

Original Image

Image on Screen

Pixelization can be caused by the main board but is more commonly a source error

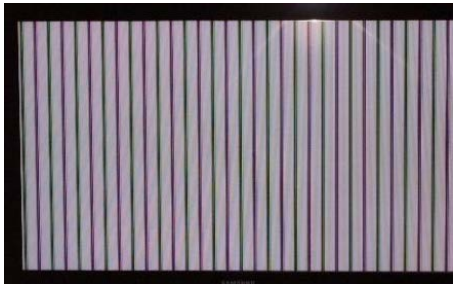

Vertical or Horizontal Lines :Defective Panel likely but also T-CON, LVDS, or Main Board. Use Test Patterns in Factory Service Mode to determine error)

ALIGNMENTS:

1. Check/Set Option Bytes:

Using the Customer Remote

1. Turn the power off and set to stand-by mode
2. Press the remote buttons in this order; POWER OFF-MUTE-1-8-2-POWER ON to turn the set on.
3. The set turns on and enters service mode. This may take approximately 20 seconds.
4. Press the Power button to exit and store data in memory.
   - If you fail to enter service mode, repeat steps 1 and 2 above.
5. Initial SERVICE MODE DISPLAY State

	Project	PB5G	PB5G	PB5G
	Model	B550	B550	B550
	Model Code	PN50B550T2FXZA	PN58B550T2FXZA	PN63B550T2FXZA
No.	ITEMS			
1	Factory Reset	-	-	-
2	Type	50FSpL4	58FNtK1	63FMeK1
3	Model	PB550	PB550	PB550
4	TUNER	ALPS	ALPS	ALPS
5	Region	US	US	US
6	DDR	SAMSUNG	SAMSUNG	SAMSUNG
7	Light Effect	Off	Off	Off
8	Inch	50"	58"	63"
9	Exhibition Mode	Off	Off	Off

Option Bytes

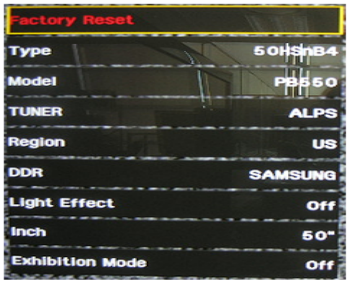

2. Check/Perform Firmware Upgrade for all repairs.

3. Perform reset in Service Mode & Plug and Play if Main board is replaced.

SPECIAL NOTES:

Inform customer of reset of all Settings if Main Board or Panel is replaced.

Option											
Type	Model	Tuner	Region	DDR	Light Effect	Audio AMP	Ch Table	Country	Front Color	Local Set	Exhibition Mode
46A2UF7E	UC7000	SEMCO	-	-	OFF	-	SAMEX	USA	T-M-Brn	-	-